


# USER MANUAL

## -HAND HYDRAULIC PRESS




1.

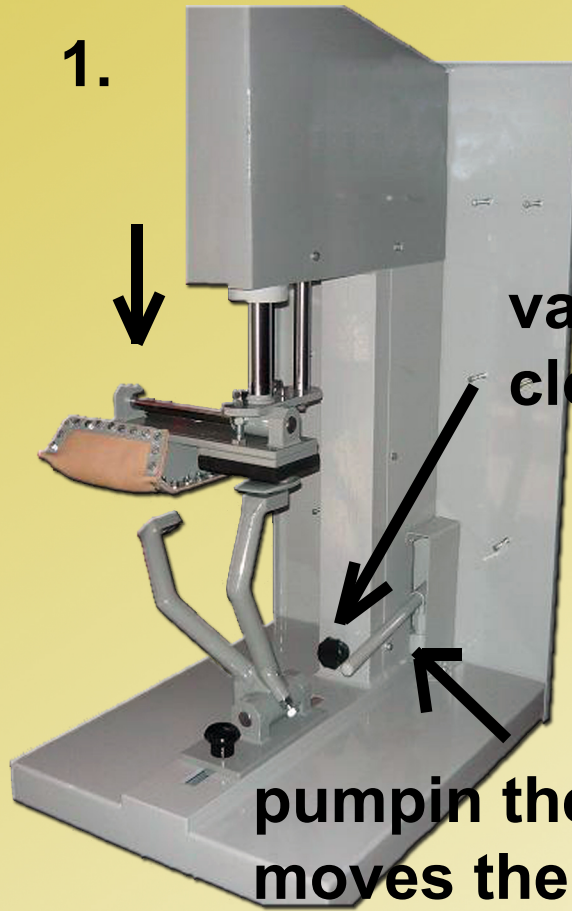

valve must be closed

pumpin the lever moves the piston down

2.

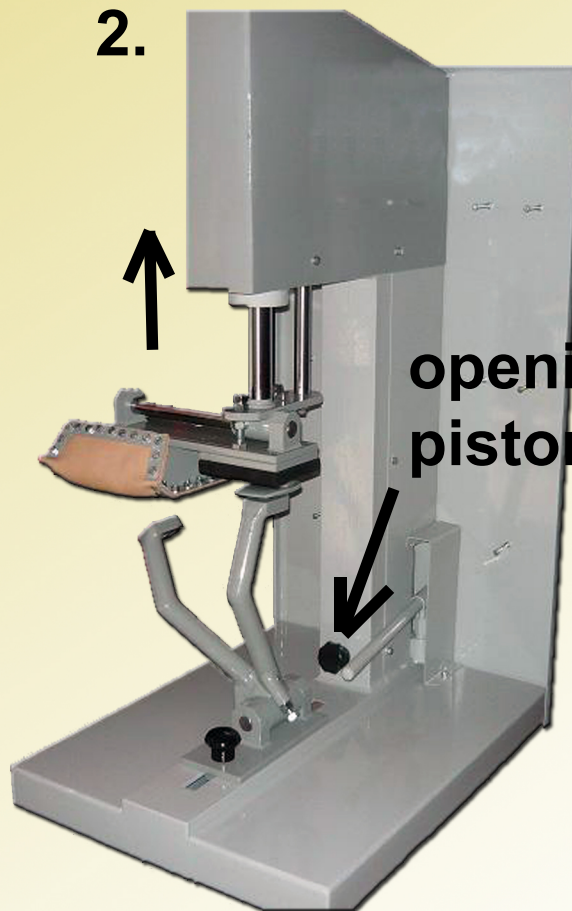

opening the valve piston moves up